

Circuit Breaker Will Not Stay On

Your marine air conditioners circuit breaker continues to "trip off."

Shorted wire. Check for loose or disconnected wires. Reconnect or replace as necessary.

Pump internally shorted. Remove pump power from electrical box and start the unit. If circuit does not trip, replace pump.

Check circuit breaker for proper operation. If faulty, replace circuit breaker.

Compressor shorted internally. Compressor must be replaced professionally.

Seek factory assistance if needed at info@mmair.com